 




Konformitätserklärung

 
Hiermit erklärt die Invento Products & Services GmbH, dass sich dieses Modell (Art. Nr. 500810) einschließlich Controller in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet. Die Konformitätserklärung kann unter folgender Adresse gefunden werden: www.inventodownload.com/conformity

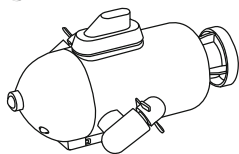

Gebrauchsanleitung

Bitte lesen Sie die Gebrauchsanleitung vor dem erstmaligen Betrieb aufmerksam durch. Gebrauchsanleitung bitte sorgfältig aufbewahren.


Inhalt



U-Boot
1x



 Antenne
1x



Sender
1x



Ladekabel
1x



Propeller
2x



 
Schalter-
Stecker-
Einheit
1x




Gebrauchsanleitung
1x

Produktbeschreibung

U-Boot


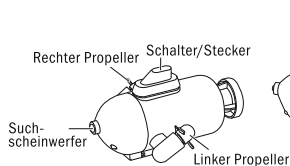


Steckplatz für
Schalter/Stecker

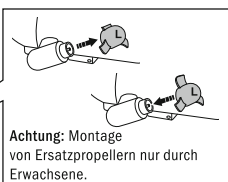 


Achtung: Montage von Ersatzpropellern nur durch Erwachsene.

  Sender

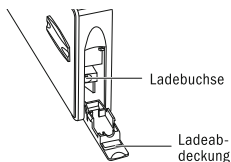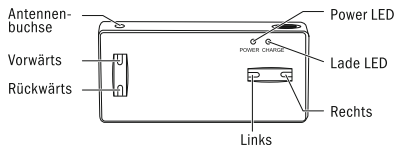


Vorbereitung

 
1. Drücken Sie den Verschluss in die angegebene Richtung und entnehmen Sie den Sender (Abb. 1)

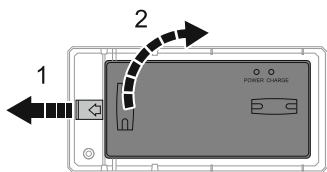

 
2. Öffnen Sie den Deckel und entnehmen Sie die Antenne (Abb. 2)

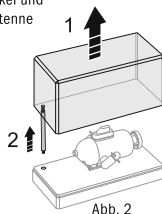

 
3. Lösen Sie die Schrauben an der Unterseite der U-Boot-Halterung (Abb. 3)

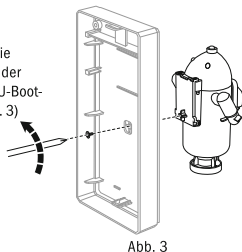

 
4. Drehen Sie die 4 Befestigungsschrauben gegen den Uhrzeigersinn (Abb. 4)

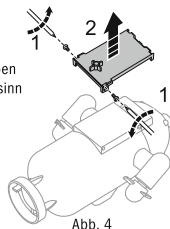

 5. Schrauben Sie die Antenne in die vorgesehene Buchse am Sender (Abb. 5)

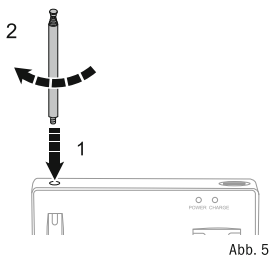

 6. Öffnen Sie das Batteriefach mit einem Kreuzschlitz-Schraubendreher und legen Sie 4 x AA Batterien in das Batteriefach ein. Anschließend den Deckel wieder auf das Batteriefach schrauben (Abb. 6)

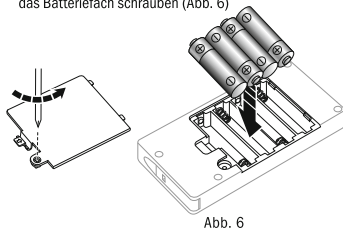

7. Drücken Sie auf eine der Tasten. Die Power LED leuchtet auf (Abb. 7)

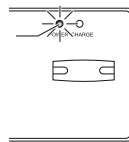 


Abb. 7

8. Stecken Sie den Ladestecker in die Ladebuchse des Senders (Abb. 8). Entnehmen Sie die Schalter-Stecker-Einheit vom U-Boot und stecken Sie das andere Ende des Ladekabels in den Steckplatz (Abb. 9). Die Lade LED wird aufleuchten (Abb. 10) und nach 10 Minuten wieder erlöschen. Das U-Boot ist nun aufgeladen.

 


Abb. 8

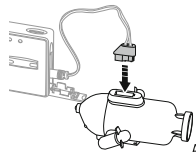 


Abb. 9

 


Abb. 10

9. Stecken Sie die Schalter-Stecker-Einheit wieder in den Steckplatz des U-Boots. Die Suchscheinwerfer des U-Boots werden nun aufleuchten (Abb. 11)

 


Abb. 11

Bedienung

Ziehen Sie die Teleskopantenne auf Maximum aus, um die beste Sendeleistung zu erreichen. Anschließend das U-Boot in das Wasser setzen.

1. Vorwärts-Taste drücken: Das U-Boot taucht vorwärts (Abb. 12)

 


Abb. 12

2. Rückwärts-Taste drücken: Das U-Boot taucht rückwärts (Abb. 13)

 


Abb. 13

3. Links-Taste drücken: Das U-Boot fährt eine Links-Kurve (Abb. 14)

 


Abb. 14





Links

4. Rechts-Taste drücken: Das U-Boot fährt eine Rechts-Kurve (Abb. 15)




Abb. 15

    Rechts




Wichtige Hinweise

 1. Richtiges Aufladen

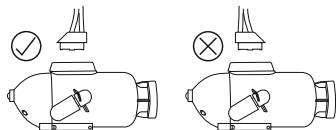

 2. Betriebsbereitschaft herstellen



Tauchtiefe: 1 m

Reichweite der Fernsteuerung: ca. 3 - 5 m

Warn- und Sicherheitshinweise – bitte aufbewahren

- ▶ Propeller stellen eine ständige Verletzungsgefahr dar. Vermeiden Sie unter allen Umständen eine Berührung solcher Teile.
- ▶ Bitte verwenden Sie keine unterschiedlichen Batteriearten und mischen Sie nicht neue und alte Batterien.
- ▶ Bitte verwenden Sie nur den empfohlenen Batterie-Typ.
- ▶ Leere Batterien bitte aus dem Fahrzeug entfernen.
- ▶ Batterien bitte nicht in offenes Feuer werfen - Explosionsgefahr!
- ▶ Bitte keinen Kurzschluss verursachen.
- ▶ Bitte beim Einlegen der Batterien auf richtige Polarität achten.
- ▶ Bitte Batterien aus dem Produkt entfernen, wenn das Produkt für längere Zeit nicht genutzt wird.
- ▶ Packung aufbewahren! Enthält wichtige Informationen.
- ▶ Niemals Batterien aufladen, die dafür nicht bestimmt sind.
- ▶ Akkus nur unter Aufsicht von Erwachsenen laden.
- ▶ Batterien entfernen, wenn der Artikel über einen längeren Zeitraum nicht benutzt wird.

ACHTUNG! Nicht für Kinder unter 3 Jahren geeignet, da Kleinteile verschluckt werden können. Erstickungsgefahr!



Vertrieb:

 
INVENTO GmbH · Klein Feldhus 1 · D-26180 Rastede - Germany · service@invento-hq.com · www.invento-hq.com

US Distribution by: HQ KITES & DESIGNS U.S.A., INC. · sales@hq-kites-usa.com · www.hq-kites-usa.com



Declaration of Conformity





Herewith Invento Products & Services GmbH declares that this model (Art.No. 500810) including remote control meets the basic requirements and any other relevant requirements of guideline 1999/5/EC. The original declaration of conformity can be requested on www.inventodownload.com/conformity

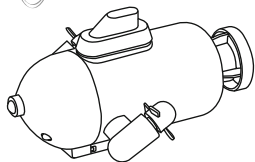

Instruction Manual




Please read the operating instructions carefully before using.
Please keep operating instructions in a safe place.

    Contents

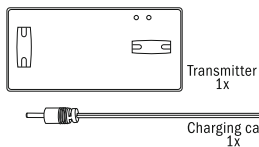
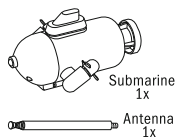


Part Details

   Submarine

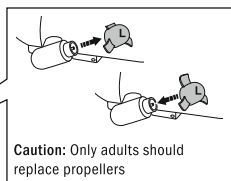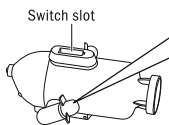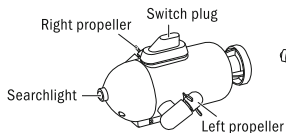


Transmitter

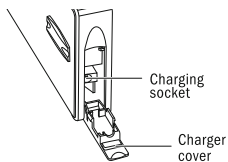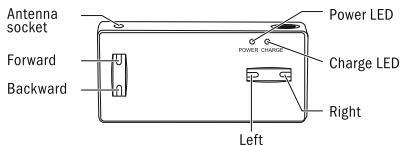  


Preparation

 
1. Push the LOCK towards the direction shown to release the transmitter (fig. 1)

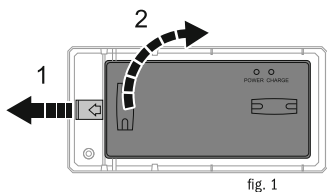

 
2. Remove the cover and take out the antenna (fig. 2)

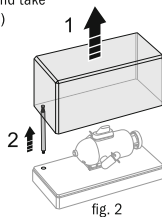

 
3. Remove the screw on the submarine base as illustrated (fig. 3)

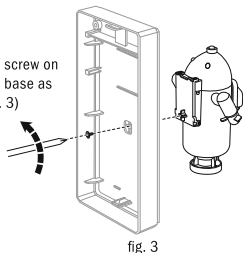

 
4. Turn the four retaining screws anticlockwise (fig. 4)

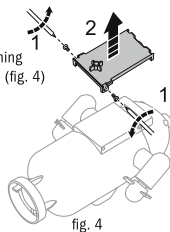

 5. Insert and tighten the antenna to the antenna hole on the transmitter as illustrated (fig. 5)

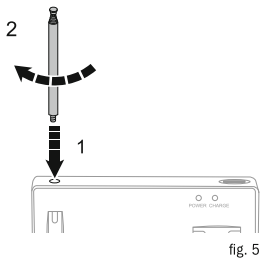

 6. Use a Phillips screwdriver to open the battery compartment cover. Insert 4 x AA batteries with the correct polarity and replace the battery compartment cover (fig. 6)

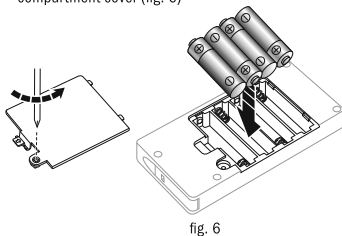

7. Press one of the buttons. The power LED lights up (fig. 7)

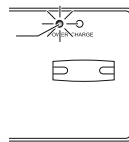 


fig. 7

8. Insert the charging plug into the charging socket on the transmitter (fig. 8). Remove the switch plug from the submarine and insert the other end of the charging cable into the switch slot (fig. 9). The charge LED lights up (charging in process, fig. 10) and will extinguish after 10 minutes (charged).

 


fig. 8

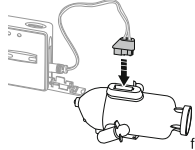 


fig. 9

 


fig. 10

9. Insert the switch plug into the switch slot. The search lights will light up (fig. 11)


 
 


fig. 11

 


Operation


Extend the transmitter's antenna for better signal reception and then put the Submarine into the water.

Forward  fig. 12

 
1. Press forward button: The Submarine will dive forwards (fig. 12)

Backward  fig. 13




 
2. Press backward button: The Submarine will surface backwards (fig. 13)

Left  fig. 14

3. Press left button: The Submarine moves to the left (fig. 14)


Right  fig. 15

    4. Press right button: The Submarine moves to the right (fig. 15)




Important Notes

 1. Correct charging

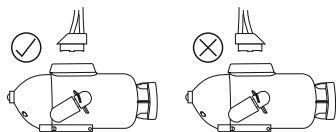

 2. Ready for operation



Dive depth: 1 m

Range of remote control: Approx. 3 - 5 m

Warnings and Cautions – keep after reading

- ▶ Propellers are a constant source of injury. Never touch moving parts.
- ▶ Different types of batteries or new and used batteries are not to be mixed.
- ▶ Only batteries of the same or equivalent type as recommended are to be used.
- ▶ Exhausted batteries should be removed from the product.
- ▶ Do not dispose of batteries in fire, or batteries will explode or leak.
- ▶ The supply terminals are not to be short-circuited.
- ▶ Batteries are to be inserted with the correct polarity.
- ▶ Rechargeable batteries are to be removed from the product before being charged (if removable).
- ▶ The packaging has to be kept since it contains important information.
- ▶ Non-rechargeable batteries are not to be recharged.
- ▶ Rechargeable batteries are only to be charged under adult supervision.
- ▶ Remove batteries if the product is not to be used for an extended period.

WARNING! Not suitable for children under 3 years, because small parts could be swallowed. Choking hazard.



Distributed by:

INVENTO GmbH · Klein Feldhus 1 · D-26180 Rastede - Germany · service@invento-hq.com · www.invento-hq.com

US Distribution by: HQ KITES & DESIGNS U.S.A., INC. · sales@hq-kites-usa.com · www.hq-kites-usa.com