

### Konformitätserklärung



Hiermit erklärt die Shantou Chenghai Weili Toys Industrial Co. Ltd., dass sich diese Modelle (Invento Art. Nr. 500090 / 500091 / 500092 = WL Toys Art. Nr. 3010) einschließlich Controller in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befinden.  
Die Konformitätserklärung kann unter folgender Adresse gefunden werden: [www.inventodownload.com/conformity](http://www.inventodownload.com/conformity)

### Gebrauchsanleitung


Bitte lesen Sie die Gebrauchsanleitung vor dem ersten Gebrauch aufmerksam durch und bewahren Sie sie anschließend sorgfältig auf.

RC Tractor Set "Crane", Art.Nr. 500090  
RC Tractor Set "Silage Trailer", Art.Nr. 500091  
RC Tractor Set "Trailer", Art.Nr. 500092


### Vorbereitung

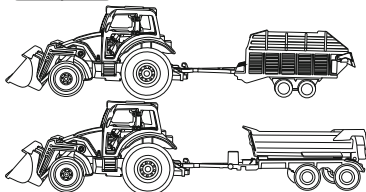


#### 1. Anhängerfahrzeug am Traktor ankuppeln.

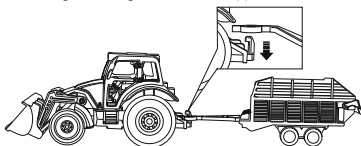

#### 2. Schrauben Sie die Antenne in die vorgesehene Öffnung am Sender und drehen Sie die Antenne sanft fest.

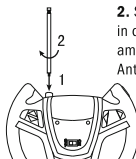


#### 3. Öffnen Sie das Batteriefach mit einem Kreuzschlitz-Schraubendreher und legen Sie 3 x AA Batterien (nicht im Lieferumfang enthalten) in das Batteriefach ein. Anschließend den Deckel wieder auf das Batteriefach schrauben.




### Aufladen

Öffnen Sie die Ladeabdeckung am Sender und entnehmen Sie das Ladekabel. Stecken Sie den Ladestecker in die Ladebuchse des Traktors. Die Ladeanzeige sollte nun aufleuchten und nach ca. 4 Minuten wieder erlöschen. Nach dem Erlöschen der Ladeanzeige ist das Fahrzeug aufgeladen.

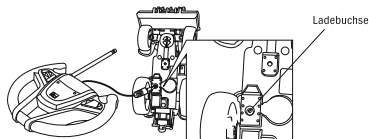


## Betrieb

1. Ziehen Sie die Teleskopantenne auf die maximale Länge heraus, um die beste Sendeleistung zu erreichen. Schalten Sie den Traktor am AN/AUS-Schalter auf AN und stellen Sie das Fahrzeug auf eine ebene Fläche.

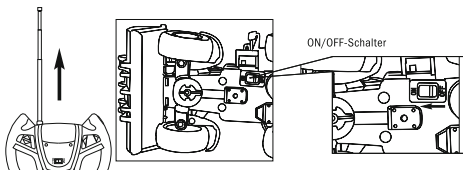

## 2. Fernbedienungsfunktionen:

- (1) Beim Drücken einer beliebigen Taste der Fernbedienung leuchtet die Funktionsanzeige auf.
- (2) Durch Drücken der Vorwärts-/Rückwärts-Taste bewegt sich der Traktor mit eingeschalteten Frontscheinwerfern vorwärts bzw. rückwärts.
- (3) Durch gleichzeitiges Drücken der Vorwärts-/Rückwärts-Taste sowie der Links-/Rechts-Taste fährt der Traktor nach links bzw. rechts.
- (4) Wenn bei Vorwärts-Fahrt die Turbotaste (Speedup) gedrückt wird, beschleunigt der Traktor erheblich. Durch Drücken der Links-/Rechts-Taste wird der Traktor jedoch automatisch abbremsen, um Unfällen vorzubeugen.

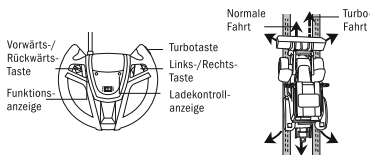

3. Die Lenkeinstellung wird verwendet, um den Geradeauslauf des Traktors zu korrigieren.



## Warn- und Sicherheitshinweise

- ▶ Bitte verwenden Sie keine unterschiedlichen Batteriearten und mischen Sie nicht neue und alte Batterien
- ▶ Bitte verwenden Sie nur den empfohlenen Batterie-Typ.
- ▶ Leere Batterien bitte aus dem Fahrzeug entfernen.
- ▶ Batterien bitte nicht in offenes Feuer werfen.
- ▶ Explosionsgefahr!
- ▶ Bitte keinen Kurzschluss verursachen.
- ▶ Bitte beim Einlegen der Batterien auf richtige Polarität achten.
- ▶ Bitte Batterien aus dem Produkt entfernen, wenn das Produkt für längere Zeit nicht genutzt wird.
- ▶ Packung aufbewahren! Enthält wichtige Informationen.
- ▶ Exklusive Batterien (benötigt 3 x AA Batterien).
- ▶ ACHTUNG! Nicht für Kinder unter 3 Jahren geeignet, da Kleinteile verschluckt werden können. Erstickungsgefahr!

INVENTO GmbH · Klein Feldhus 1 · D-26180 Rastede · Germany · info@invento-hq.com · www.invento-hq.com  
US Distribution by: HQ KITES & DESIGNS U.S.A., INC. · sales@hq-kites-usa.com · www.hq-kites-usa.com

### Declaration of Conformity

Herewith Shantou Chenghai Weili Toys Industrial Co. Ltd. declares that these models (Invento Art.No. 500090 / 500091 / 500092 – WL Toys Art.No. 3010) including remote control meet the basic requirements and any other relevant requirements of guideline 1999/5/EC.




The original declaration of conformity can be requested on [www.inventodownload.com/conformity](http://www.inventodownload.com/conformity)

### Operating instructions


Please read the operating instructions carefully before using and keep it in a safe place.

RC Tractor Set "Crane",	Art.Nr. 500090
RC Tractor Set "Silage Trailer",	Art.Nr. 500091
RC Tractor Set "Trailer",	Art.Nr. 500092


### Preparation




1. Couple the trailer vehicle to the tractor.

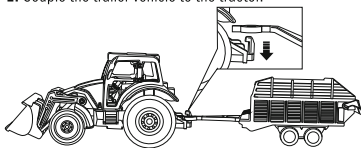

2. Insert and tighten the antenna to the antenna hole on the transmitter as illustrated.

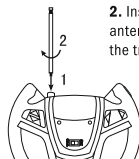


3. Use a Phillips screwdriver to open the battery compartment cover. Insert 3 x AA batteries with the correct polarity and replace the battery compartment cover.




### Charge

Open the charger cover on the transmitter and take out the charging cable. Insert the charging plug into the charging socket. The charging LED lights up to indicate the charging is in process. The LED will extinguish after the tractor has been completely charged (charging lasts approximately 4 minutes).

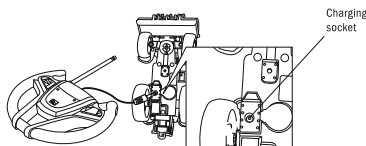

## Operation

1. Extend the transmitter's antenna for a better signal reception. Move the ON/OFF switch on the tractor to ON, and place it on a flat ground.

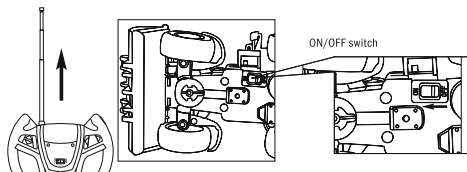


## 2. Remote Controller Functions:

(1) The FUNCTION INDICATOR lights up when any button on the transmitter is pressed.


(2) The tractor runs forward and backward with illuminated headlights when the forward/backward button is pressed.

(3) Pressing the LEFT/RIGHT button on the transmitter while the tractor is running forward or backward, the vehicle will make left/right turns.

(4) Pressing the speedup button while the tractor is running forward, the vehicle will speed up. The tractor will slow down to avoid accidents, if the LEFT/RIGHT button is pressed.

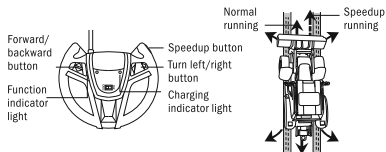

3. The DIRECTIONAL GUIDE is used to adjust the tractor's straight-line stability.

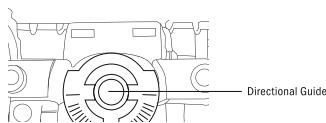

## Warnings and Cautions

- ▶ Different types of batteries or new and used batteries are not to be mixed.
- ▶ Only batteries of the same or equivalent type as recommended are to be used.
- ▶ Exhausted batteries should be removed from the product.
- ▶ Do not dispose of batteries in fire, or batteries will explode or leak.
- ▶ The supply terminals are not to be short-circuited.
- ▶ Batteries are to be inserted with the correct polarity.
- ▶ Non-rechargeable batteries are not to be recharged.
- ▶ Rechargeable batteries are only to be charged under adult supervision.
- ▶ Rechargeable batteries are to be removed from the product before being charged (if removable).
- ▶ Remove batteries if the product is not to be used for an extended period.
- ▶ The packaging has to be kept since it contains important information.
- ▶ Batteries not included (3 x AA batteries needed).
- ▶ WARNING! Not suitable for children under 3 years, because small parts could be swallowed. Choking hazard.

INVENTO GmbH · Klein Feldhus 1 · D-26180 Rastede · Germany · info@invento-hq.com · www.invento-hq.com  
US Distribution by: HQ KITES & DESIGNS U.S.A., INC. · sales@hq-kites-usa.com · www.hq-kites-usa.com