

RC License Car Edition:

Offiziell lizenziert



Konformitätserklärung

Hiermit erklärt die Chenghai Create Toys Factory, dass sich diese Modelle (Invento Art. Nr. 50008117 / 50008105 / 50008014 / 50008016 / 50008315 / 50008317 / 50008218 / 50008214 = Chenghai Create Toys Factory Art. Nr. 8004) einschließlich Controller in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befinden.


Die Konformitätserklärung kann unter folgender Adresse gefunden werden: www.inventodownload.com/conformity

Gebrauchsanleitung


Bitte lesen Sie die Gebrauchsanleitung vor dem ersten Gebrauch aufmerksam durch und bewahren Sie sie anschließend sorgfältig auf.

Vorbereitung


1. Drehen Sie den Verschluss am Boden der Verpackung um 90 Grad nach unten oder oben und entnehmen Sie Lenkrad-Fernbedienung und Antenne.

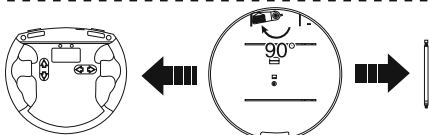


2. Entfernen Sie die Banderole und öffnen Sie den Klarsichtdeckel in Pfeilrichtung.




3. Lösen Sie jetzt mit einem Kreuzschlitz-Schraubendreher die Schraube an der Unterseite des Fahrzeughalters.

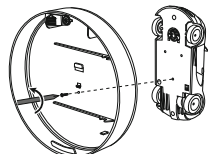

4. Schrauben Sie die Antenne in die vorgesehene Öffnung am Sender und drehen Sie die Antenne sanft fest.

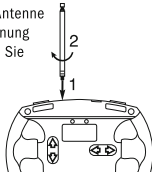


5. Öffnen Sie das Batteriefach (Deckel in Pfeilrichtung schieben) und legen Sie 4 x AA Batterien (nicht im Lieferumfang enthalten) in das Batteriefach ein. Achten Sie beim Einsetzen neuer Batterien auf die richtige Polarität (siehe Kennzeichnung im Batteriefach). Anschließend den Deckel wieder auf das Batteriefach schieben.

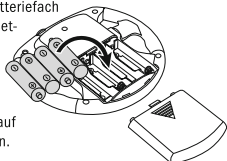



Aufladen

Öffnen Sie die Ladeabdeckung am Sender und entnehmen Sie das Ladekabel. Stecken Sie den Ladestecker in die Ladebuchse des Fahrzeugs. Die Ladeanzeige sollte nun aufleuchten und nach ca. 5 Minuten wieder erlöschen. Nach dem Erlöschen der Ladeanzeige ist das Fahrzeug aufgeladen.

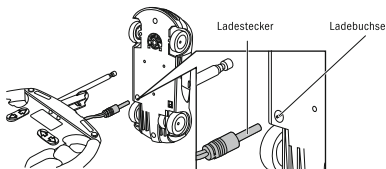


Betrieb

1. Ziehen Sie die Teleskopantenne auf die maximale Länge heraus, um die beste Sendeleistung zu erreichen. Schalten Sie das Fahrzeug am ON/OFF-Schalter auf ON und stellen Sie es auf eine ebene Fläche.

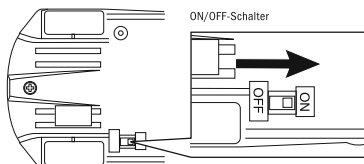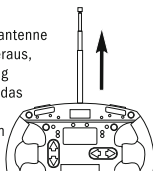


2. Fernbedienungsfunktionen:

- (1) Beim Drücken einer beliebigen Taste der Fernbedienung leuchtet die Funktionsanzeige auf.
- (2) Durch Drücken der Vorwärts-/Rückwärts-Taste bewegt sich das Fahrzeug vorwärts (Frontscheinwerfer leuchten) bzw. rückwärts (Rücklichter leuchten).
- (3) Durch gleichzeitiges Drücken der Vorwärts-/Rückwärts-Taste sowie der Links-/Rechts-Taste fährt das Fahrzeug nach links bzw. rechts.
- (4) Wenn bei Vorwärts-Fahrt die Turbotaste (Speedup) gedrückt wird, beschleunigt das Fahrzeug erheblich. Durch Drücken der Links-/Rechts-Taste wird es jedoch automatisch abbremsen, um Unfällen vorzubeugen.
- (5) Um die Bedienung zu erleichtern, verfügt die Fernbedienung über 2 Turbotasten (links und rechts).

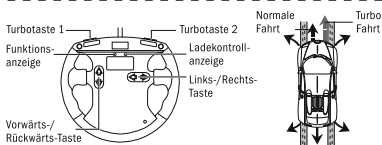

3. Die Lenkeinstellung wird verwendet, um den Geradeauslauf des Fahrzeugs zu korrigieren.



Warn- und Sicherheitshinweise

- ▶ ACHTUNG! Nicht für Kinder unter 3 Jahren geeignet, da Kleinteile verschluckt werden können. Ersticksgefahr!
- ▶ Altersempfehlung: 6+

Batterie-Sicherheitshinweise

Exklusive Batterien (benötigt 4 x AA Batterien).

- ▶ Der Austausch von Batterien ist durch Erwachsene vorzunehmen.
- ▶ Beim Batteriewechsel auf die richtige Polarität achten.
- ▶ Verbrauchte Batterien sofort entfernen.
- ▶ Altbatterien nur an den dafür vorgesehenen Abgabestellen entsorgen. Die Entsorgung im Hausmüll ist verboten.
- ▶ Batterien entfernen, wenn ein Fahrzeug längere Zeit nicht in Gebrauch genommen wird.
- ▶ Nicht-aufladbare Batterien dürfen nicht wieder aufgeladen werden.
- ▶ Niemals alte und neue Batterien oder unterschiedliche Batterietypen mischen.
- ▶ Batterien niemals kurzschließen.
- ▶ Niemals Batterien erhitzen, zerlegen oder beschädigen, um Auslaufen oder Explosionen zu vermeiden.

INVENTO GmbH · Klein Feldhus 1 · D-26180 Rastede · Germany · service@invento-hq.com · www.invento-hq.com
US Distribution by: HQ KITES & DESIGNS U.S.A., INC. · sales@hq-kites-usa.com · www.hq-kites-usa.com

RC License Car Edition:

Officially licensed



Inspiration

Declaration of Conformity


Herewith Chenghai Create Toys Factory declares that these models (Invento Art.No. 50008117 / 50008105 / 50008014 / 50008016 / 50008315 / 50008317 / 50008218 / 50008214 = Chenghai Create Toys Factory Art.No. 8004) including remote control meet the basic requirements and any other relevant requirements of guideline 1999/5/EC. The original declaration of conformity can be requested on www.inventodownload.com/conformity

Operating instructions


Please read the operating instructions carefully before using and keep it in a safe place.

Preparation


1. Turn the lock on the bottom of the packaging 90 degrees (upwards or downwards) and remove the transmitter and the antenna.

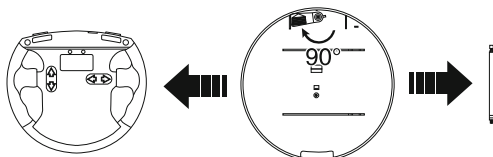


2. Remove adhesive banderole and open the transparent cover in the direction of the arrow.




3. Use a Phillips Screwdriver to remove the screw on the base as illustrated.

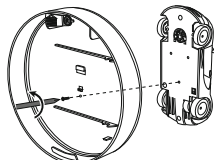

4. Insert and tighten the antenna to the antenna hole on the transmitter as illustrated.

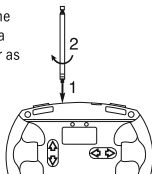


5. Open the battery compartment by sliding the battery cover in the direction of the arrow. Insert 4 x AA batteries with the correct polarity (see marking in battery compartment) and replace the battery compartment cover.

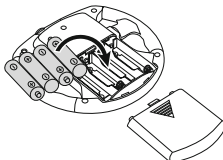


Charge

Open the charger cover on the transmitter and take out the charging cable. Insert the charging plug into the charging socket. The charging LED lights up to indicate the charging is in process. The LED will extinguish after the vehicle has been completely charged (charging lasts approximately 5 minutes).

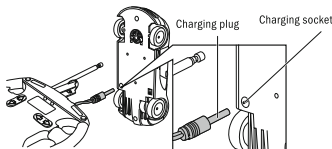


Operation

1. Extend the transmitter's antenna for a better signal reception. Move the ON/OFF switch on the vehicle to ON, and place it on a flat ground.

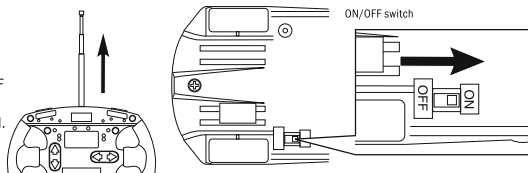


2. Remote Controller Functions:

- (1) The FUNCTION INDICATOR lights up when any button on the transmitter is pressed.
- (2) The vehicle runs forward with illuminated headlights and backward with illuminated rear lights when the forward/backward button is pressed.
- (3) Pressing the LEFT/RIGHT button on the transmitter while the vehicle is running forward or backward, the car will make left/right turns.
- (4) Pressing the speedup button while the vehicle is running forward, the car will speed up. It will slow down to avoid accidents, if the LEFT/RIGHT button is pressed.
- (5) The transmitter provides 2 speedup buttons to make operation easier.

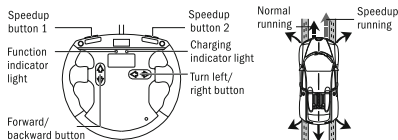

3. The DIRECTIONAL GUIDE is used to adjust the vehicle's straight-line stability.



Warnings and Cautions

- ▶ WARNING! Not suitable for children under 3 years, because small parts could be swallowed. Choking hazard.
- ▶ Age: 6+

Battery Safety Information

Batteries not included (4 x AA batteries needed).

- ▶ Replacement of batteries must be done by adults.
- ▶ Please ensure that the polarity is correct when inserting new batteries.
- ▶ Promptly remove dead batteries.
- ▶ Please dispose used batteries as required by law – the disposal in household garbage is forbidden.
- ▶ Remove batteries for prolonged storage.
- ▶ Non-rechargeable batteries are not to be re-charged.
- ▶ DO NOT mix old and new batteries or types of batteries (i.e. alkaline/standard).
- ▶ DO NOT short-circuit the batteries.
- ▶ DO NOT heat, dismantle or deform batteries – batteries may leak or explode.

INVENTO GmbH · Klein Feldhus 1 · D-26180 Rastede · Germany · service@invento-hq.com · www.invento-hq.com
US Distribution by: HQ KITES & DESIGNS U.S.A., INC. · sales@hq-kites-usa.com · www.hq-kites-usa.com